WARNING! *Only use original VELDT titanium screws and the wrench provided with the helmet. As inserts are made of brass, their threads can be easily damaged if not handled with care. Due to vibrations when riding, please regularly check all screws and tighten them when necessary. To reduce unpleasant noises when riding and to prevent water ingress, keep screws inserted, even while not using accessories.*

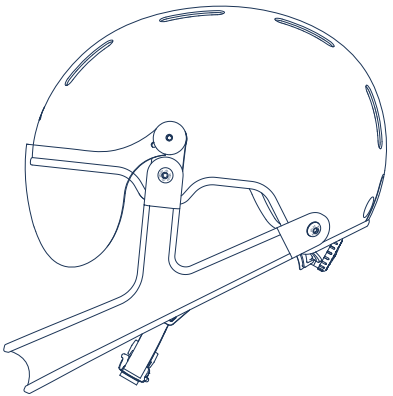

HAVE A PEACEFUL RIDE
HANDMADE

HEADQUARTERS
VELDT SAS
84, RUE CLAUDE BERNARD
75005 PARIS, FRANCE

PARIS STORE
26, RUE DU BOURG TIBOURG
75004 PARIS, FRANCE

+33 1 73 16 83 37
contact@veldt.fr
www.veldt.fr

FSC
www.fsc.org
MIX
From responsible sources
FSC® C154755

VELDT
Mark 2

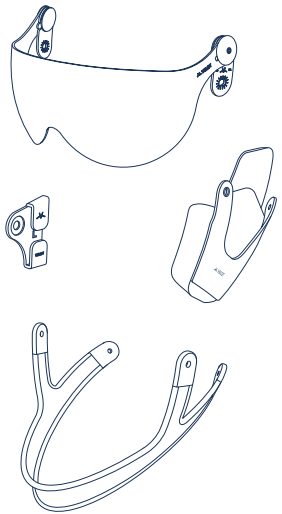

ACCESSORIES

ENGLISH

Guide available in other languages
on our website : www.veldt.fr/guides

Mounting the visor

1

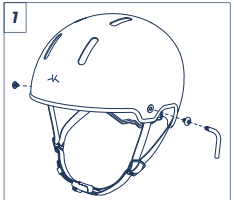

Remove both front screws

2

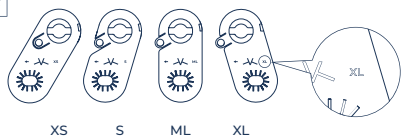

Check the marking guides on the left and right side of the frame and be sure to use the mount corresponding to your helmet size

3

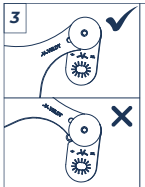

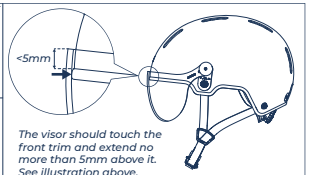

The visor should touch the front trim and extend no more than 5mm above it. See illustration above.

Fully close the visor brackets and place the visor on the helmet
Lightly tighten both screws and adjust the visor position

4

With the visor in place,
tighten the screws firmly

Mounting earpads

1

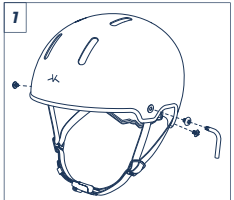

Remove all four screws

2

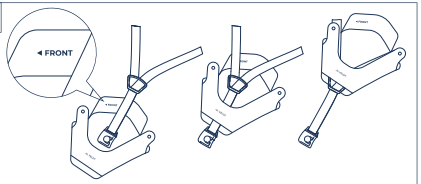

Place the « FRONT » marking towards the front of the helmet
Pass the chinstrap through the earpad

3

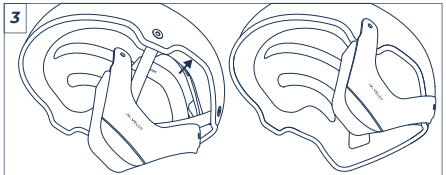

Slide the cheek insert into the helmet between the trim and the lining
Once properly installed, the insert should be completely hidden by the shell

4

Tighten the four screws

Mounting goggles retainers

1

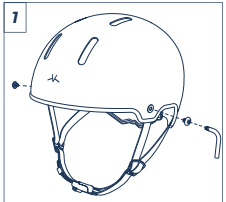

Remove both front screws

2

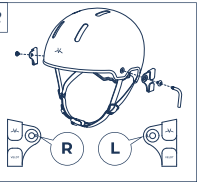

Check the markings L (Left) and R (Right) and lightly tighten both retainers

3

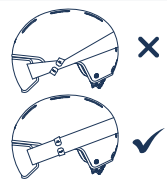

Align retainers with your goggle strap and tighten the screws firmly

Mounting the chinguard

1

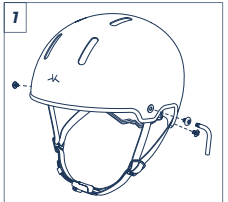

Remove all four screws

2

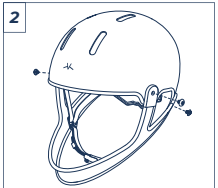

Align the chinguard with all rivets and lightly tighten the screws

3

Tighten all four screws